



VALUE IN WEIGHING

The 6700U Series POS Scale that allows you to accurately weigh each ingredient as it's placed on the scale, ensuring precision with every use.








The 6700U Series POS Scale is trade-approved and seamlessly integrates cash register systems (ECR), enhancing efficiency and streamlining repetitive bench-top operations. Designed for flexibility and durability, these scales feature a low-profile aluminum frame, an innovative 'touchless' tare mechanism, and customizable weighing modes that deliver precise measurements while ensuring food safety (NSF certified).

**Interface:** Compatible with electronic cash registers and most POS terminals, the 6700U scale system offers quick integration with ECRs and point-of-sale software. It supports communication with other devices via USB (VCP) or RS-232 connections.

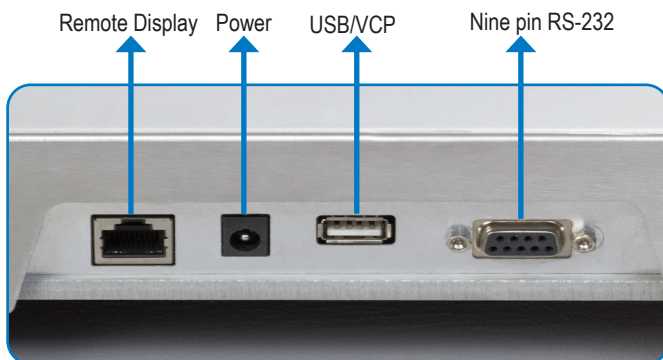

#### Four Scale Configuration Options:

1. Integrated with POS/ECR systems
2. Configured for hands free portion control
3. Set for fast check weighing
4. Optimized for precise counting

**"Touchless" Tare:** When making the perfect pizza, sub or pie, it always comes down to accurate portion control. The touchless tare feature quickly allows the operator to accurately weigh out each ingredient on the scale just by simply waving their hand over the display. Its fast and simple, reducing the risk of contamination by eliminating repeated contact with the scale's keypad.



**Trade-Approved:** Legally approved for buying or selling goods by weight and price computing/POS applications.





**NSF Certification** Ensures the product has been designed and manufactured to meet food safety standards and easy-to-clean.



**Construction:** Designed with a sleek, durable aluminum frame, the 6700U scale offers 150% overload protection and a removable 304 food-grade stainless steel platter.

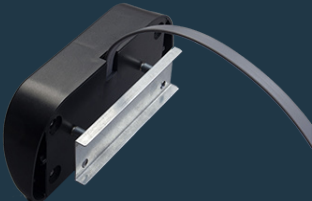

**Options:**

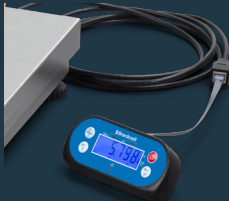 <p><b>Mounting Bracket:</b> Easily mount the display on a wall for a clear view.</p>	 <p><b>Display Bracket:</b> Easily mount the display to front of scale.</p>	 <p><b>Display Post:</b> 12"</p>	 <p><b>Remote Display:</b> Available with 24" or 7' cable.</p>
--	--	--	---



## Specifications USA


Model/Capacity	6702U	6710U	6720U
<b>Capacity</b>	5, 15, 30 lb	15, 30 lb	15, 30, 60 lb
<b>Unit</b>	lb, lb/oz*, kg, g, pcs*		
<b>Display</b>	5½ digits seven segments 0.58" / 15 mm high LCD with blue backlight		
<b>Platform Dimension</b>	6" x 10" 152 mm x 254 mm	10" x 10" 254 mm x 254 mm	12" x 14" 305 mm x 355 mm
<b>Remote Display Dimension</b>	2.4" x 5.8" x 1.1" 61.8 mm x 149.1 mm x 29 mm		Optional
<b>Operator Keys</b>	Hold/Print, On/Off/Zero, Unit, Tare		
<b>Power</b>	9 VDC, 600mA power adapter with center positive (included) or USB (VCP) cable (not included)		
<b>Communication</b>	USB (VCP) and nine pine RS-232		
<b>Certifications</b>	NTEP, Measurement Canada, NSF, UL/CUL adapter, FCC Compliant, RoHS, CE, WEEE		

\*non-NTEP

## Specifications EUROPE

Model/Capacity	6702U	6710U	6720U
<b>Capacity</b>	3-6 kg	3-6 kg 6-15 kg	15-30 kg
<b>Unit</b>	kg, g, lb/oz*, pcs*		
<b>Display</b>	5½ digits seven segments 0.58" / 15 mm high LCD with blue backlight		
<b>Platform Dimension</b>	152 mm x 254 mm 6" x 10"	254 mm x 254 mm 10" x 10"	305 mm x 355 mm 12" x 14"
<b>Remote Display Dimension</b>	2.4" x 5.8" x 1.1" 61.8 mm x 149.1 mm x 29 mm		Optional
<b>Operator Keys</b>	Hold/Print, On/Off/Zero, Unit, Tare		
<b>Power</b>	9 VDC, 600mA power adapter with center positive (included) or USB (VCP) cable (not included)		
<b>Communication</b>	USB (VCP) and nine pine RS-232		
<b>Certifications</b>	EC, OIML, NAWI, NSF, UL/CUL adapter, FCC Compliant, RoHS, WEEE, CE		

\*non-trade approved

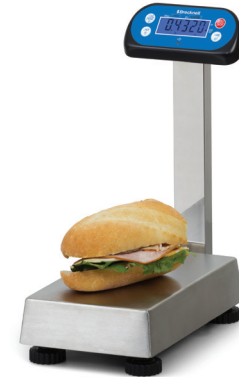

6702U shown with optional tower



6710U shown with optional front mounted bracket



6720U shown with optional external display